

# 01/PREMATURE **FAILURE IN BEARINGS**

INCORRECT INSTALLATION OF THE SEAL (IN REVERSE) ON THE DRIVEN AXLE

## CAUSES

• We have not read the assembly instructions and we didn't pay attention when we dismantled the previous bearing.

# **▲** CONSEQUENCES

- In a few days, oil the differential group may be introduced by the exterior seal into the bearing, mixing it into the grease and exiting from the inner seal.
- If you do not solve the above problem, there will be a bearing seizure caused by the loss of all lubrication.









### RECOMMENDATION

Read carefully the attached information and follow the instructions. Failure caused by lack of attention can present a danger for the end user. Our assembly and disassembly tools will help to ensure proper mounting of the bearings, since they fit every requirement.





